



Activity Invest bvba
sales@activity-invest.com

KHL-Europe

Refill Instructions for Epson Re-Filling Spongless Cartridges.

Epson Re-Filling Spongless Cartridges :



1. Pull out the two rubber plugs from the refill cartridge.
2. Fill the syringe with the ink.
3. Insert the syringe with the needle into the "filling hole" (left).
4. Filling about 15-18 ml until the cartridge is full.
5. Insert the rubber plug into the filling hole.



Remove the air :



1. Insert the syringe into the outlet hole.
2. Pull on the plunger until you get 1 ml of ink in the syringe.
3. For use the cartridge you **MUST** have the plug in the filling hole and you **MUST** remove the plug from the air hole (right)

Chips :



You can use the old chips from the old cartridges with the Chip-Resetter or you can use the Auto-Reset-Chips without the Resetter.

Do not use any chip resetter on the auto-reset-chips. Doing so will permanently destroy the auto-reset-chip !

KHL-Europe is a brand name
from Activity Invest bvba

www.activity-invest.com
Hasselt-Belgium

Fax: +32-11-500260
E-mail: sales@activity-invest.com